



HOW TO DO IT

HOW TO ASSEMBLE YOUR NEW BICYCLE?

www.santafixie.co.uk





HOW TO ASSEMBLE YOUR NEW BICYCLE?

Watch the assembly video for more information

<https://www.youtube.com/watch?v=PdQZS5JHgDM>

PREPARATION

YOU NEED THE INCLUDED TOOLKIT, AS WELL AS SCISSORS, PEDAL GREASE, AND A TIRE INFLATOR.



UNBOXING

OPEN THE BOX WITH A CUTTER AND CAREFULLY REMOVE THE BICYCLE.



REMOVE THE PROTECTIONS

REMOVE ALL PLASTICS AND PROTECTIONS BY CUTTING THE TIES WITH SCISSORS. BE CAREFUL NOT TO DAMAGE THE COMPONENTS.




INSTALL THE REAR WHEEL

SELECT FIXED OR FREEWHEEL, PLACE THE REAR WHEEL AND PASS THE CHAIN THROUGH THE COG AND THE CHAINRING.



TIGHTEN THE CHAIN

TIGHTEN THE CHAIN BY PULLING THE WHEEL BACKWARDS AND TIGHTEN THE NUTS WITH THE PROVIDED WRENCH, WITHOUT OVERDOING IT.

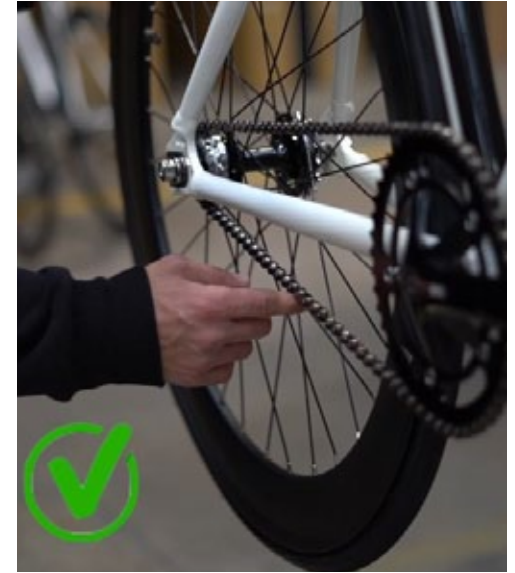

INSTALL THE FRONT WHEEL

PLACE THE FRONT WHEEL AND TIGHTEN THE NUTS. DO NOT OVERTIGHTEN.



INSTALL THE HANDLEBAR

BEFORE INSTALLING THE HANDLEBAR, YOU MUST MOUNT THE BRAKE LEVERS.

THEN REMOVE THE STEM CAP, PLACE THE HANDLEBAR AND TIGHTEN THE NUTS MAINTAINING THE SAME SPACE ON BOTH SIDES.



INSTALL THE BRAKES

PUT THE BRAKE CABLE HOUSING FROM THE LEVER TO THE BRAKE BRIDGE.

NOW PASS THE CABLE THROUGH THE HOUSING FROM THE LEVER TO THE BRAKE BRIDGE AND TIGHTEN WITH THE HEX KEY.

MAKE SURE THE BRAKE PADS ARE ALIGNED WITH THE RIM BRAKING SURFACE.



INSTALL V-BRAKES (WILD model)


First, make sure you have the necessary tools on hand:
an Allen wrench and needle-nose pliers.



1. Insert the cable end into the clamp located on the brake arm.



2. Squeeze the brake lever and thread the cable through the cable tensioner slot.

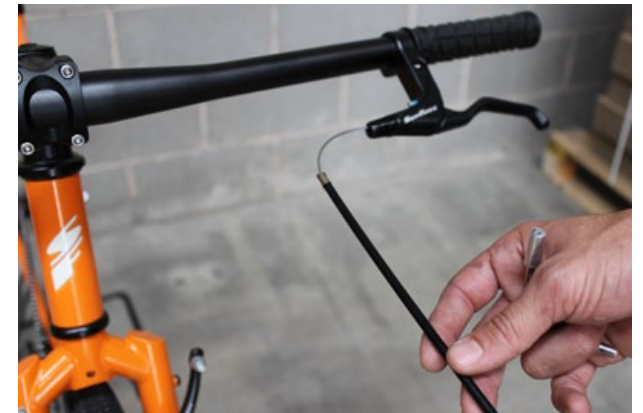


3. Install the cable housing.



4. Install the cable guide.



5. Loosen the clamp screw, thread the brake cable, and tighten it to be firm. There should be a small amount of slack, not too loose or too tight.

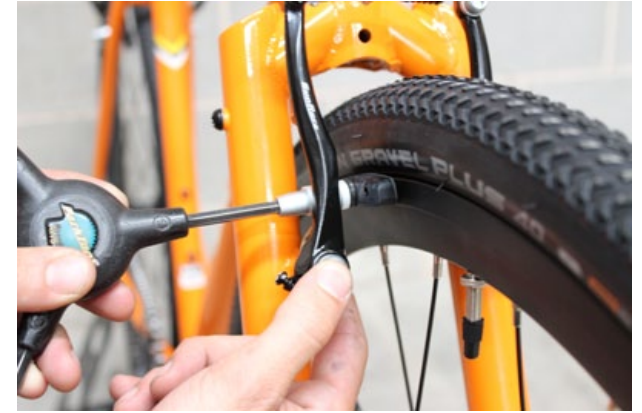

6. Align the brake pads with the rim's braking surface. The pads should make even contact with the rim when you squeeze the brake lever.



7. Fine-tune the cable tension using the spring adjustment screw. There is one on each side of the brake.



8. Trim the excess cable with pliers or cable cutters.



9. Install the cable end cap.

INSTALL THE SADDLE

INSERT THE SEATPOST INTO THE FRAME AT THE DESIRED HEIGHT AND TIGHTEN WITH THE PROVIDED HEX KEY.




INSTALL THE PEDALS

FOLLOW THE INSTRUCTIONS IN THE ATTACHED BROCHURE FOR THE CORRECT PLACEMENT OF THE PEDALS.

ADD GREASE (OR ANY LUBRICANT) TO THE THREAD.

THREAD THE **R** PEDAL ON THE RIGHT CRANK AND **L** ON THE LEFT.

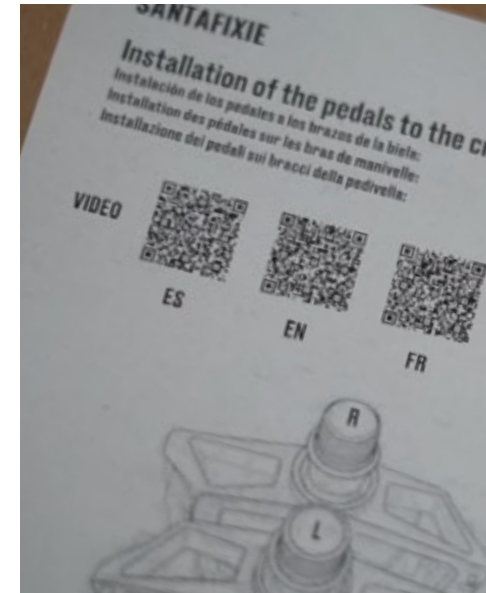

INFLATE THE TIRES

THE RECOMMENDED INFLATION PRESSURE APPEARS ON THE TIRE ITSELF.



LAST ADJUSTMENTS

PLACE THE BRAKE CABLE HEADS, ADJUST THE HANDLEBAR AND STEM WELL, AND SECURE THE REAR BRAKE CABLE WITH THE VELCRO.





SNTFX

AND ENJOY YOUR NEW BIKE!



Watch the assembly video for more information

<https://www.youtube.com/watch?v=PdQZS5JHgDM>